

Fine Dust Room Sensors

QSA2700D / QSA2700 / AQS2700



The sensors acquire the PM2.5 and PM10 concentration in the room.

- Operating voltage AC/DC 24 V
- Signal output DC 0...10 V for PM2.5 and PM10
- Communicative output, Modbus RS485
- Range of use 0...50 °C / 5...95% r.h. (non-condensing)

Use

The fine dust room sensor is designed to measure and transmit indoor concentrations of PM2.5 and PM10.

- 0...10 V and Modbus output
- Configurable Modbus parameters
- Plug&play configuration for Siemens Climatix™ controller
- QSA2700:
 - 3-color LED service indication
- QSA2700D:
 - 2.4-inch color LCD screen for PM2.5 values and AQI indication
 - Energy efficient mode: The screen is off if no one is in front of the sensor (within 1 m for several minutes)
 - Micro USB DC 5V for display
 - 4 selectable languages: English, Chinese (default), German, French
 - 3 selectable Air Quality Index classes

Type summary


| Type | Order number | Description | Display |
|----------|--------------|--|--|
| QSA2700 | S55720-S457 | Room sensor for detection of PM2.5 and PM10 | 3-color LED service indication |
| QSA2700D | S55720-S458 | Room sensor with LCD display for detection of PM2.5 and PM10 | 2.4-inch color LCD screen for PM2.5 values, Air Quality Index, and service |
| AQS2700 | S55720-S459 | Sensor module for replacement | |

Order and delivery

When ordering, provide the name and type reference, e.g.: fine dust room sensor QSA2700.

Each product includes 1 fine dust room sensor (with a pre-installed AQS2700), 1 plastic mounting plate and 2 screws.

Device overview

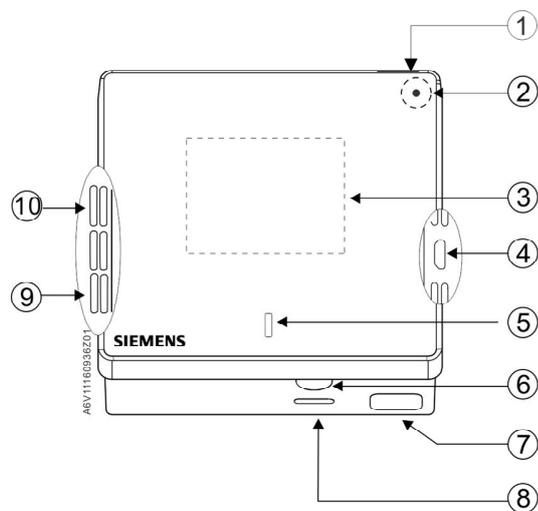

| | |
|-------------------|---|
| 1 | Hole for wiring (top) for surface mounting |
| 2 [QSA2700 only] | LED |
| 3 [QSA2700D only] | LCD display |
| 4 |  (power supply for display only) |
| 5 [QSA2700D only] | Proximity sensor |
| 6 | Push button |
| 7 | Hole for wiring (bottom) for surface mounting |
| 8 | Hole for attaching the mounting plate to the housing |
| 9 | Air outlet |
| 10 | Air inlet |

LED colors and patterns (QSA2700)

| Color | Pattern | Description |
|--------------|--------------------------------------|--|
| Green | Permanently on | Working properly, Modbus configured |
| Yellow | Permanently on | Working properly, Modbus with factory settings |
| Red | Permanently on | Error 1, replace sensor module |
| Red | Flashing (0.5 s on / 0. 5 s off) | Error 2, communication error |
| Red / yellow | Flashing (0.5 s red / 0. 5 s yellow) | Possible inaccurate measurement |

Modbus configuration

The device is configurable by a Modbus master device. After changing the parameters, turn off the device and on again to activate the changes. Configure the device before mounting. Refer to Modbus registers [→ 10] for more information.

Push button operations for Modbus resetting and Climatix™ plug&play configuration

Press the push button to automatically reset and configured via Climatix™ controllers with pre-programmed plug&play configuration.


QSA2700:

| Press the button for | LED | Action | More details |
|----------------------|-------------------------------|---|--|
| 1...5 s | Constant red | Keep pressing | |
| 5...10 s | LED off | Release the button to configure the device via the Climatix™ controller automatically (Climatix™ plug&play concept) | LED flashes for 30 s after you release the button, waiting for the configuration via Modbus: <ul style="list-style-type: none"> • If successful, the LED flashes green for 60 s, then turns to permanent green • Otherwise, the LED turns back to its original state |
| 10...13 s | Flash yellow | Release the button to reset the device to factory default | Release the button while the LED still flashes yellow. The LED keeps flashing yellow for 3 s, then turns red for 1s, before turning to permanent yellow (the reset is complete). |
| >13 s | Returns to the initial status | Resetting cancelled | |

QSA2700D:

1. From the normal display page, press the push button for 2-10 s to enter the Modbus parameter page.
2. Then press the button for 2-10 s to enter the page for Climatix™ plug&play configuration and Modbus configuration resetting.
3. Select the desired operation by short pressing the button.
4. Activate the operation by pressing the button for:
 - 5-10 s, to configure the device via Climatix™:
 - 10-20 s, to reset the Modbus settings.

Mechanical design

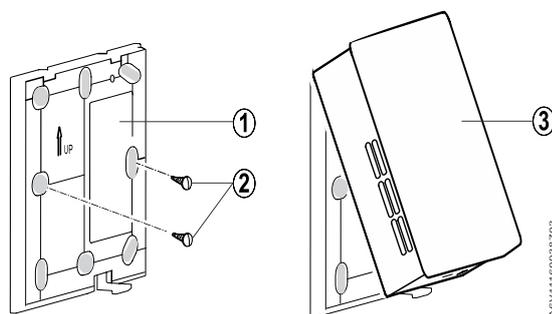

| | |
|---|-----------------------|
| 1 | Mounting plate |
| 2 | Two screws |
| 3 | Fine dust room sensor |

Product documentation

| Topic | Title | Document ID: |
|---|-----------------------------------|--------------|
| Installation, basic operation, parameters | Mounting instructions | A6V11160930 |
| Operation, maintenance, troubleshooting | Basic documentation | A6V11160936 |
| CE declaration | CE declaration | A6V11277342 |
| Product environmental declaration | Product environmental declaration | A6V11284595 |

All documentation can be downloaded at <http://siemens.com/bt/download>.

Notes


Security

| | |
|---|--|
|  | ⚠ CAUTION |
| | National safety regulations Failure to comply with national safety regulations may result in personal injury and property damage <ul style="list-style-type: none">• Observe national provisions and comply with the appropriate safety regulations. |

Engineering notes

Shielded cables must be used in environments with EMC problems.
Twisted pair cables are required for the secondary supply lines and the signal lines.

Mounting

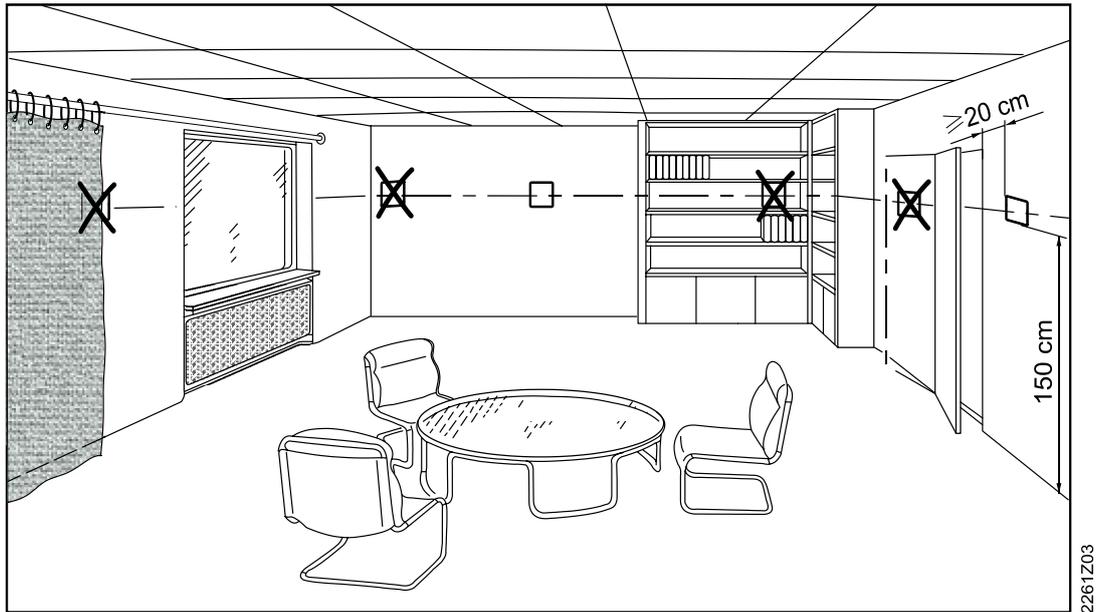

- The sensor is suitable for conduit box mounting, dry wall mounting (with mounting hole for wires concealed) and surface mounting.
- The recommended height is 1.2-1.5 m above the floor, especially for type with display.
- Do not mount the sensor in recesses, shelves, behind curtains or doors, or above heat sources.
- Avoid direct solar radiation.
- Seal the conduit box or the installation tube if any, as air currents can affect sensor readings.
- Make sure ambient conditions are within 0...50 °C and 5...95% r.h. (no condensation).
- Do not mount device in places full of oil smog, e.g. in a kitchen.
- Peel off the protective film on air inlet and air outlet before using.
- The air inlet and outlet must be free of any blockage, particularly the floc type of dirt.

Proximity sensor


- QSA2700D includes a built-in proximity sensor and enters into energy efficient mode if no person is detected in front of the sensor (approximately 1 m) over the past few minutes. In energy efficient mode, the screen is off and the sensor is working and transmitting the signals at regular intervals. Otherwise, the screen is activated and the sensor is in continuous working mode.
- QSA2700 has no proximity sensor and is working continuously.
- Keep the proximity sensor area clean as dirt may affect the detection performance.

Replacing AQS2700


Sensor module accuracy is influenced by ambient environment. We recommend to replacing the module every 1 to 3 years depending on the local environment. In environments with continuously high PM2.5 concentrations (i.e. greater than 300 $\mu\text{g}/\text{m}^3$, e.g. a smoking room), replace the module more often.

To replace the sensor module:

1. Detach the housing from the mounting plate using a screw driver.

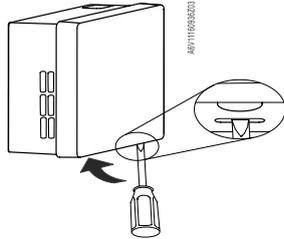

2. Take off the module by hand and replace it with a new one.

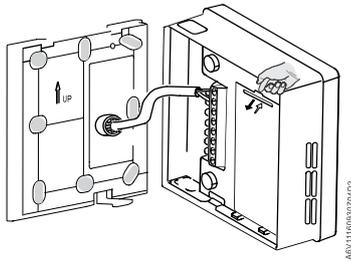

NOTICE

Turn off the device before replacing the sensor module.

If not possible, insert a new sensor module 10 s after the old one is removed.

Disposal



The device is considered electrical and electronic equipment for disposal in terms of the applicable European Directive and may not be disposed of as domestic garbage.

- Dispose of the device through channels provided for this purpose.
- Comply with all local and currently applicable laws and regulations.

Technical data

Power supply

| | |
|-------------------|------------------------------------|
| Operating voltage | AC 24 V \pm 20% / DC 13.5...35 V |
| Frequency | 50/60 Hz @ AC 24 V |

Functional data for PM2.5

| | |
|-------------------------------------|---|
| Measuring range | 0...500 $\mu\text{g}/\text{m}^3$ |
| Unit to unit variability | Max of $\pm 15 \mu\text{g}/\text{m}^3$ and $\pm 15\%$ of reading @ 25 °C and 50% r.h. |
| Analog output signal, (terminal U1) | DC 0...10 V, linear, corresponding to 0...500 $\mu\text{g}/\text{m}^3$ |

Functional data for PM10

| | |
|-------------------------------------|---|
| Measuring range | 0...500 $\mu\text{g}/\text{m}^3$ |
| Unit to unit variability | Max of $\pm 15 \mu\text{g}/\text{m}^3$ and $\pm 15\%$ of reading @ 25 °C and 50% r.h. |
| Analog output signal, (terminal U2) | DC 0...10 V, linear, corresponding to 0...500 $\mu\text{g}/\text{m}^3$ |

Connections

| Interface | |
|-----------|---------------------------------------|
| Micro USB | 5 v power connection for display only |

| Wiring connections | |
|-----------------------------|--|
| Screw terminals | Solid wires or prepared stranded wires: 0.4...1.5 mm ² |
| Slotted screws | Size 1, tightening torque 0.6 Nm (0.44 lb-ft). |
| Wiring lengths for signals. | 600 meters |

Communication

| | |
|---|--|
| Communication Protocol | RS485 ModBus |
| Transmit Mode | RTU |
| Baud rate (configurable) | 9600, 19200 (default), 38400 and 57600 BPS |
| Modbus address (configurable) | 1(default)...247 |
| Data | 8 bits (0...255) |
| Parity (configurable, following the Transmission Format) | No Parity or Odd or Even (default) |
| Stop bits (configurable, following the Transmission Format) | 1 (default) or 2 |
| Max. cable length | 1000 m (\pm 200 m) |
| Identity | Slave |

| | |
|---|---|
| Transmission Format (start bit - data bits – parity – stop bit) | 0=1-8-E-1 (default) / 1=1-8-O-1/ 2=1-8-N-1 / 3=1-8-N-2 |
| Bus Termination | No |
| Reset button | Yes |

Modbus registers

| Holding Register No. | Name | Description | Default | R/W |
|----------------------|---|---|---------|-------|
| 257 | PM2.5 value | Range: 0...500 | | R |
| 258 | PM10 value | Range: 0...500 | | R |
| 260 | Sensor working status | 0: Normal; 1: Replace sensor module; 2: Communication error | | R |
| 296 | Software version | Major version | | R |
| 297 | Software version | Minor version | | R |
| 298 | Software version | Build version | | R |
| 764 | Modbus address | 1...247 | 1 | R / W |
| 765 | Baud rate | 1= 9600bps / 2 = 19200bps / 3 = 38400bps / 4 = 57600bps | 2 | R / W |
| 766 | Transmission format (start bit – data bits – parity – stop bit) | 0 = 1-8-E-1 / 1 = 1-8-O-1 / 2 = 1-8-N-1 / 3 = 1-8-N-2 | 0 | R / W |
| 768 | Bus configuration command | 0 = Ready / 1 = Load / 2 = Discard | 0 | R / W |

Remarks:

- The register number is counted from 1.
- In the event the value for register number 764 (Modbus address), 765 (Baud rate), or 766 (Transmission format) changes, power off the device and turn it on again to activate the changed value.
- Register number 768 (Bus configuration command) is for Climatix™ plug&play configuration.

Housing protection class

| | |
|---------------------------------|------|
| Degree of protection of housing | IP30 |
|---------------------------------|------|

Operation conditions

| | |
|-------------|--------------------------------|
| Temperature | 0...50 °C |
| Humidity | 5...95% r.h. (no condensation) |

Storage and transportation conditions

| | |
|-------------|---------------------------------|
| Temperature | -20...70 °C |
| Humidity | 0...95% r. h. (no condensation) |

Standards

| | |
|-------------------------------|------------------------|
| Electromagnetic compatibility | CE standard EN 60730-1 |
| Immunity | EN 61 000-6-2 |
| Emissions | EN 61 000-6-3 |
| EU conformity declaration | A6V11277342 *) |

*) The document can be downloaded at <http://siemens.com/bt/download>.


General data

| | |
|--------|-------|
| Color | White |
| Weight | 140 g |

Display (QSA2700D)


| | |
|-----------------------|---|
| Screen | Color, no touch |
| Working status | Only active when people in front within 1 m ($\pm 10\%$); screen turns off after a few minutes if no presence is detected |
| Resolution | 1 $\mu\text{g}/\text{m}^3$ increments |
| Display | Display PM2.5 value (if value > 500 $\mu\text{g}/\text{m}^3$, then display 500+ $\mu\text{g}/\text{m}^3$) Air Quality Index corresponding to measured PM2.5 value |
| Language (selectable) | English, Chinese (simplified), German, French |

Error info

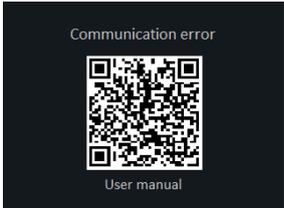
| Error info | 0-10 V output | Modbus | LED indication | LCD |
|---|---|--|--|---|
| Replace sensor module | Present 0 V (2 s) and 10 V (2 s) one by one in turn | Value of register 260 changes from 0 to 1 | Red permanently on |  |
| Communication error | Present 0 V (5 s) and 10 V (2 s) one by one in turn | Value of register 260 changes from 0 to 2 | Red flashing (0.5 s on / 0.5 s off) |  |
| Warning for possible inaccurate measurement | Present the measured value | Value of register 260 remains 0 without change | Red / yellow flashing (0.5 s red / 0.5 s yellow) |  |

Diagrams

Wiring

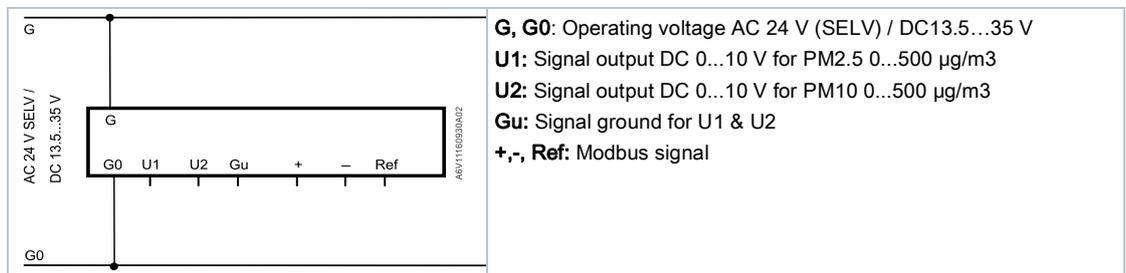

Dimensions

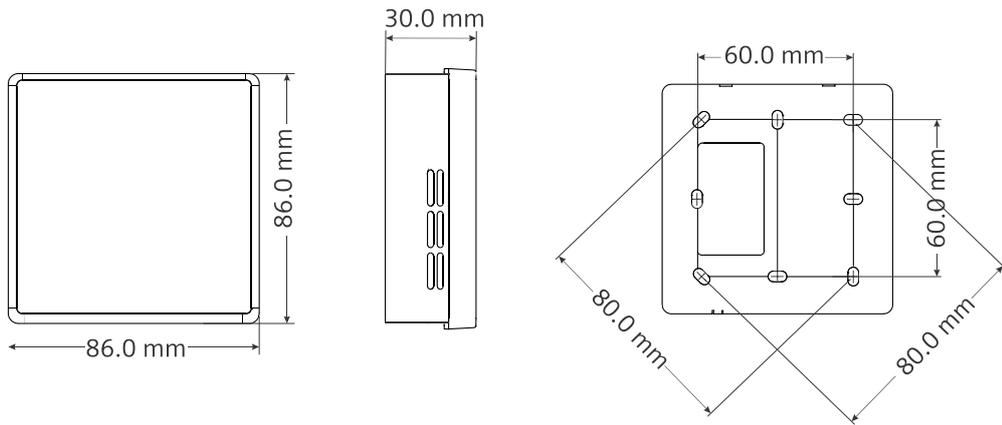

A6V11160930A00

Issued by
Siemens Switzerland Ltd
Building Technologies Division
International Headquarters
Gubelstrasse 22
CH-6300 Zug
Tel. +41 58 724 2424
www.siemens.com/buildingtechnologies

© Siemens Switzerland Ltd, 2017
Technical specifications and availability subject to change without notice.

Document ID A6V11160938_en--_b
Edition 2018-01-23